2.Exploded Views and Parts List

2-1 Cassette Deck Exploded View and Parts List

2-1-1 RCD-S70/ S70S/ S70B

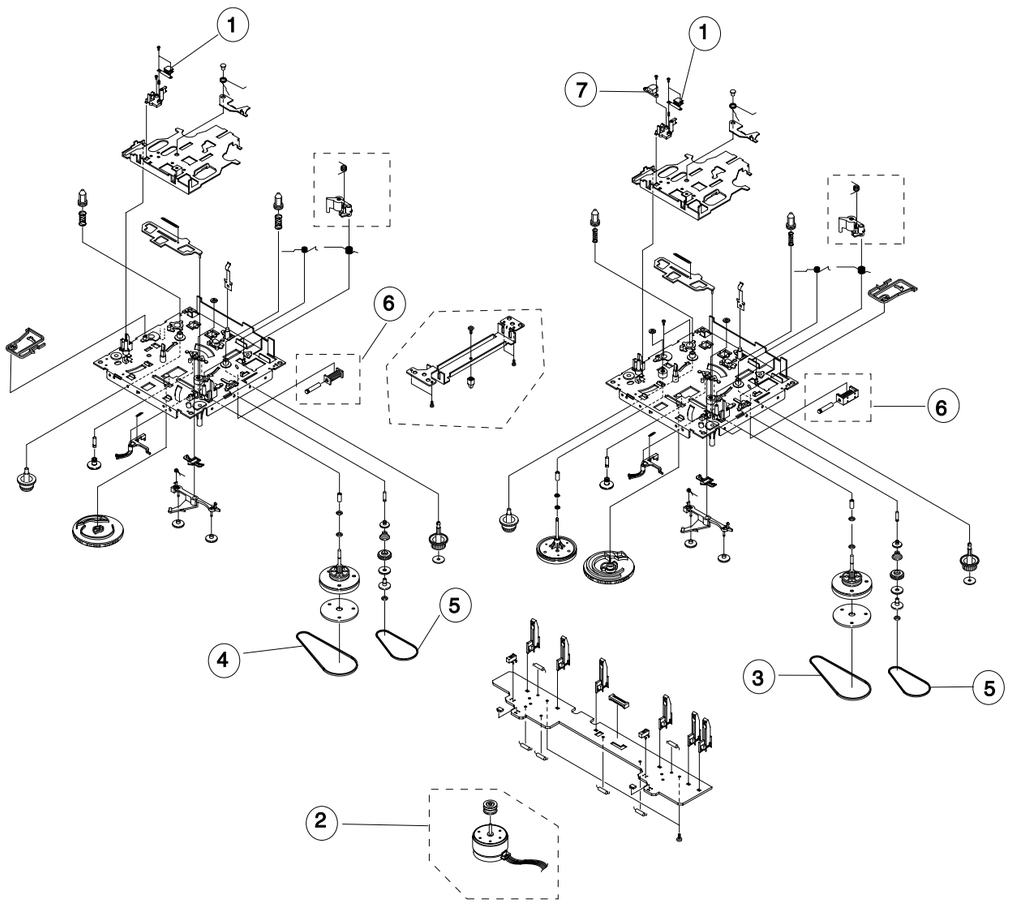

No.	Code No.	Description	Specification	Remarks
	AH59-01085A	**DECK-CASSETTE**	**ADR248DSW2**	
1	AH81-00423A	A/S-HEAD	YB-7442CB09	MT59-00054A
2	AH81-00714A	A/S-ASS'Y MOTOR	ADR2400-CCM09-093L2	9V
3	AH81-00364A	A/S-BELT MAIN1	ADR246DSW	6602-001056
4	AH81-00365A	A/S-BELT MAIN2	ADR246DSW	6602-001057
5	AH81-00101A	A/S-BELT SUB	ADR2400S,34.7	6602-001055
6	AH81-00731A	A/S PART-SOLENOID	10 OHM (9V)	MT75-K0001A
7	AH81-00424A	A/S-E-HEAD	E-621RM	MT59-00055A

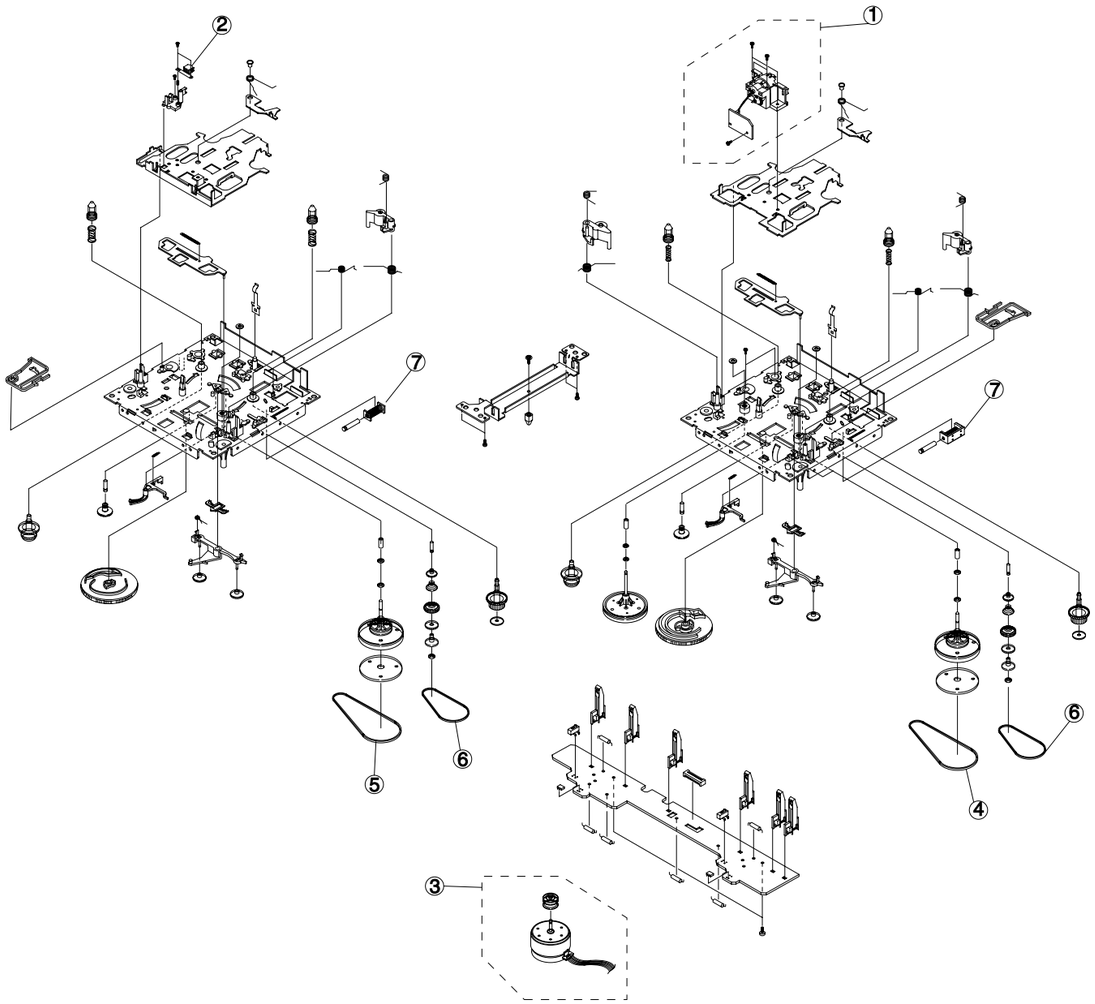

No.	Code No.	Description	Specification	Remarks
	AH59-01069A	**DECK-CASSETTE**	**ADR248AMW2**	
1	AH81-00098A	A/S-HEAD ASSY	TR981A,14KHZ	MT91-11011S
2	AH81-00423A	A/S-HEAD	YB-7442CB09	MT59-00054A
3	AH81-00714A	A/S-ASS'Y MOTOR	ADR2400-CCM09-093L2	9V
4	AH81-00364A	A/S-BELT MAIN1	ADR246DSW	6602-001056
5	AH81-00365A	A/S-BELT MAIN2	ADR246DSW	6602-001057
6	AH81-00101A	A/S-BELT SUB	ADR2400S,34.7	6602-001055
7	AH81-00731A	A/S PART-SOLENOID	10 OHM (9V)	MT75-K0001A

2-2 Main Exploded View and Parts List

2-2-1 TOTAL Exploded View

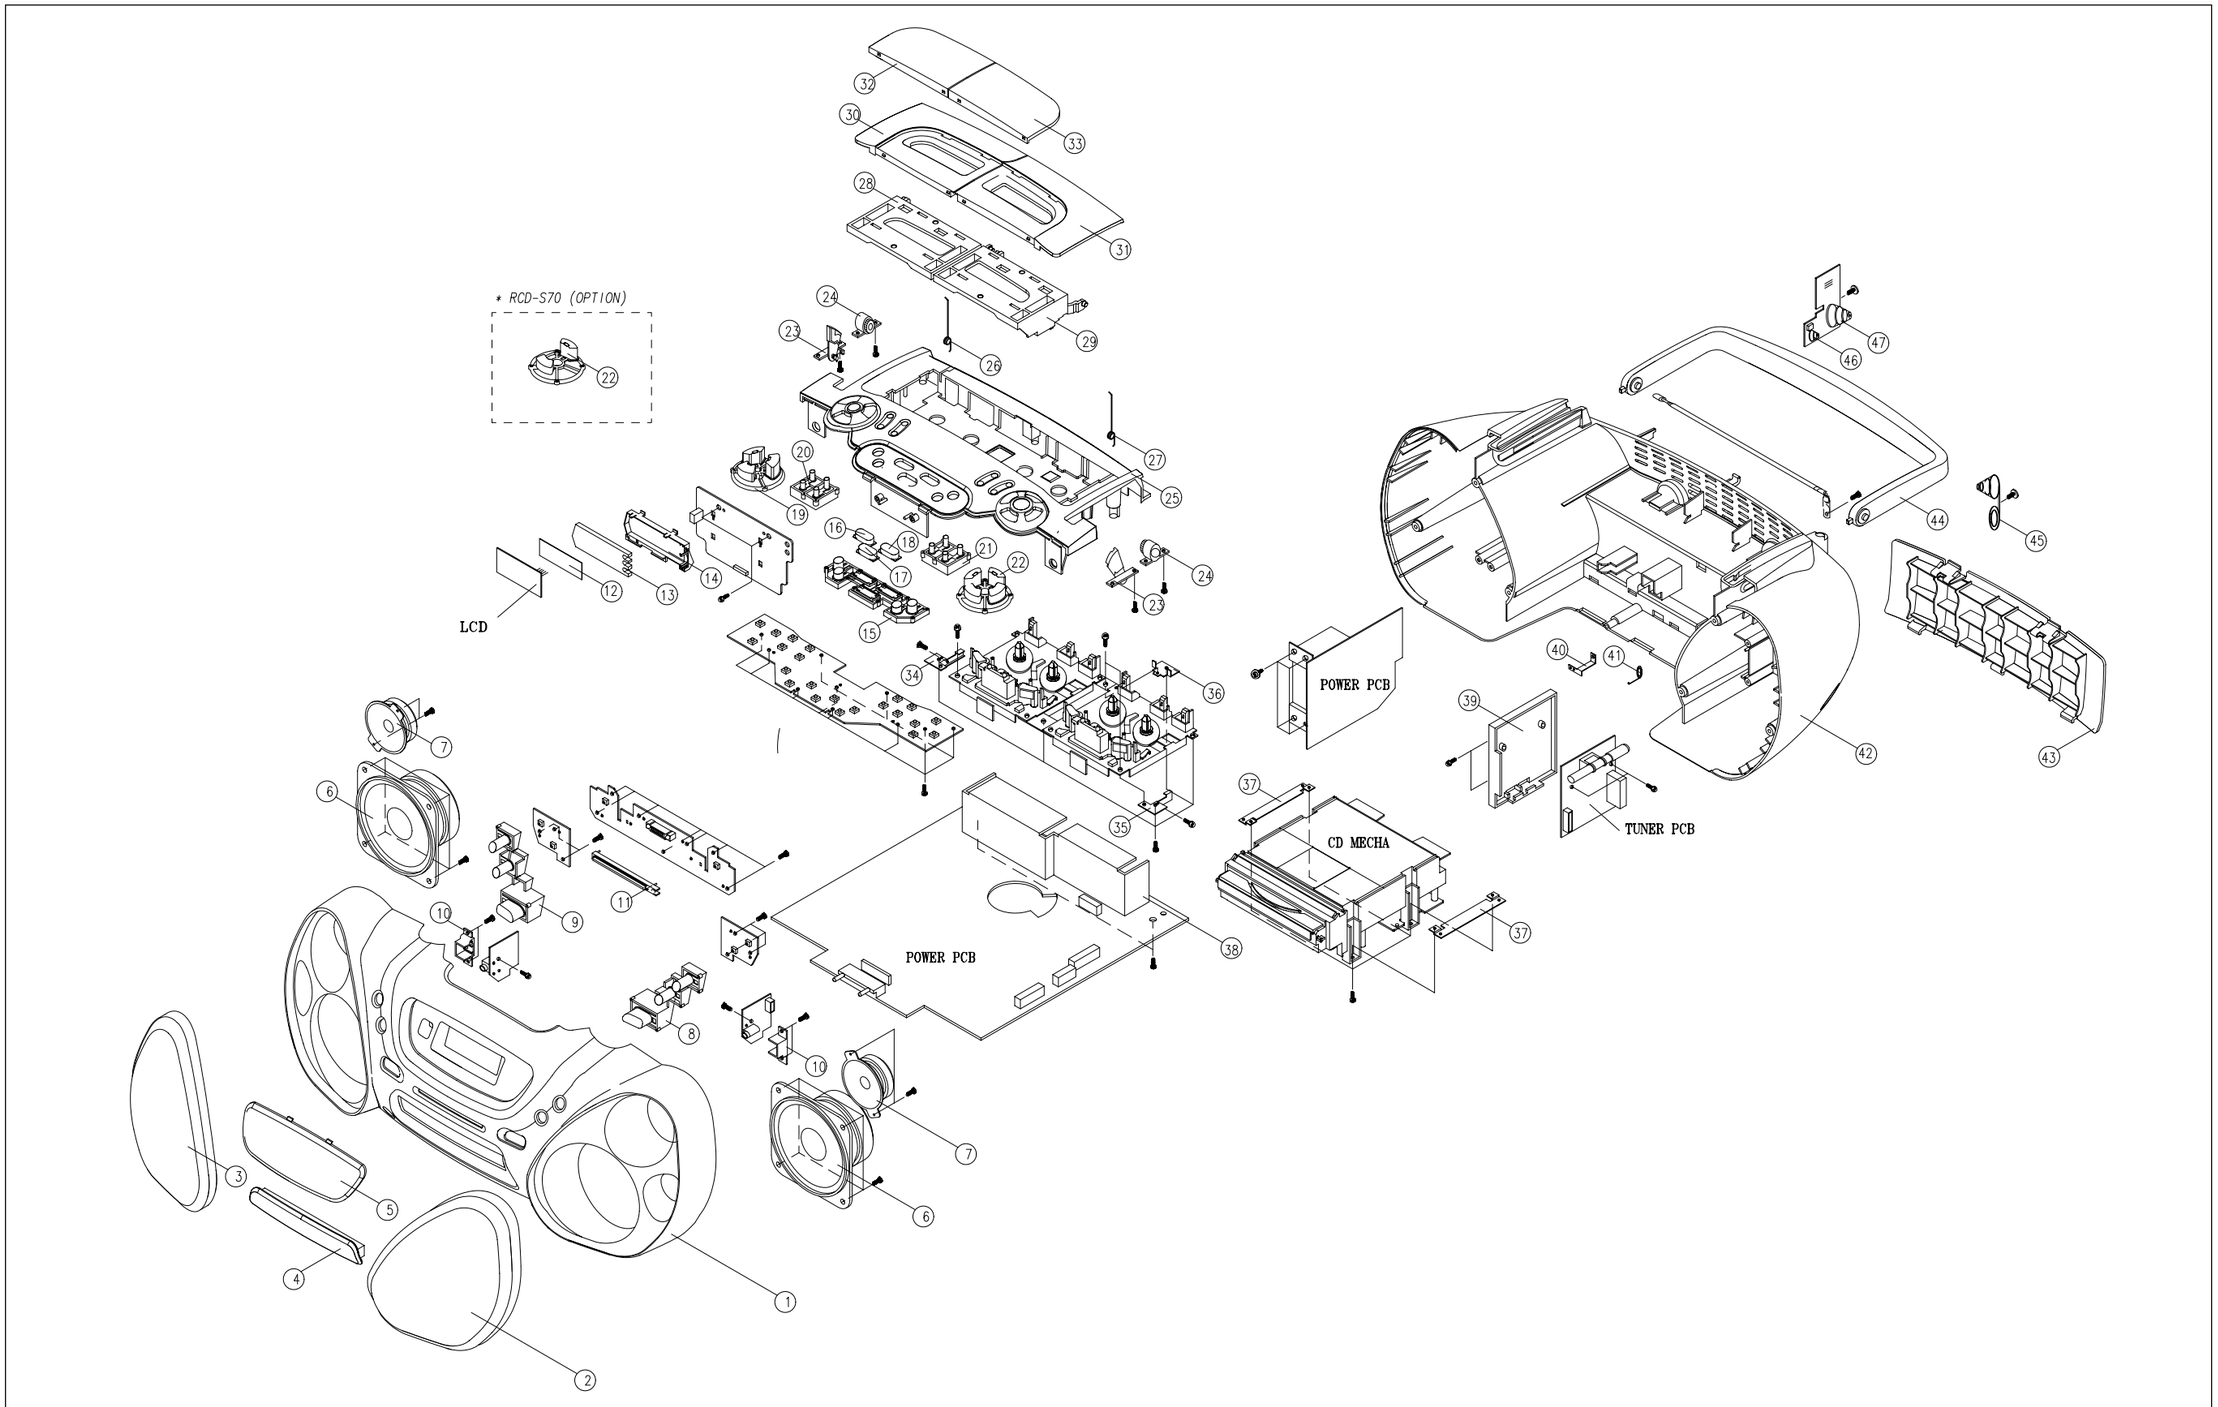

2-2-2 Parts List

No.	Code No.	Description	Specification	Remarks
1	AH64-01915B	CABINET-FRONT	HIPS, L/GRAY	RCD-S75
	AH64-01915C	CABINET-FRONT	HIPS, D/GRAY	RCD-S70
	AH64-01915D	CABINET-FRONT	HIPS, L/GRAY	RCD-S75S/S70S
	AH64-01915E	CABINET-FRONT	HIPS, BLACK	RCD-S70B
2	AH64-01931A	GRILLE L	EGI T0.6	RCD-S75
	AH64-01931B	GRILLE L	EGI T0.6	RCD-S70
	AH64-01931C	GRILLE L	EGI T0.6	RCD-S75S/70S
	AH64-01931D	GRILLE L	EGI T0.6	RCD-S70B
3	AH64-01932A	GRILLE R	EGI T0.6	RCD-S75
	AH64-01932B	GRILLE R	EGI T0.6	RCD-S70
	AH64-01932C	GRILLE R	EGI T0.6	RCD-S75S/70S
	AH64-01932D	GRILLE R	EGI T0.6	RCD-S70B
4	AH64-01921B	DOOR-CD	ABS, L/GRAY	RCD-S75
	AH64-01921C	DOOR-CD	ABS, D/GRAY	RCD-S70
	AH64-01921E	DOOR-CD	ABS, L/GRAY	RCD-S75S
	AH64-01921F	DOOR-CD	ABS, L/GRAY	RCD-S70S
	AH64-01921G	DOOR-CD	ABS. BLACK	RCD-S70B
5	AH64-01920B	WINDOW-LCD	PMMA CLEAR	RCD-S75
	AH64-01920C	WINDOW-LCD	PMMA CLEAR	RCD-S70
	AH64-01920D	WINDOW-LCD	PMMA CLEAR	RCD-S75S/70S
	AH64-01920E	WINDOW-LCD	PMMA CLEAR	RCD-S70B
6	3001-001276	SPEAKER WOOFER	93MM, 5W	
7	3001-001277	SPEAKER TWEETER	51MM, 5W	
8	AH64-01925B	KNOB-EJECT	ABS, L/GRAY	RCD-S75
	AH64-01925C	KNOB-EJECT	ABS, D/GRAY	RCD-S70
	AH64-01925D	KNOB-EJECT	ABS, L/GRAY	RCD-S75S/70S
	AH64-01925E	KNOB-EJECT	ABS. BLACK	RCD-S70B
9	AH64-01924B	KNOB-POWER	ABS, L/GRAY	RCD-S75
	AH64-01924C	KNOB-POWER	ABS, D/GRAY	RCD-S70
	AH64-01924D	KNOB-POWER	ABS, L/GRAY	RCD-S75S/70S
	AH64-01924E	KNOB-POWER	ABS. BLACK	RCD-S70B
10	AH61-01080A	HOLDER-JACK	ABS	
11	AH67-00177A	LENS-CD	PMMA BLUE	
12	AH63-00438A	FILTER-LCD	PC T0.16	
13	AH67-00178A	LENS-LCD	PMMA CLEAR	
14	AH61-01079A	HOLDER-LCD	ABS WHITE	
15	AH64-01930B	KNOB-CONTROL	ABS, L/GRAY	RCD-S75
	AH64-01930C	KNOB-CONTROL	ABS, D/GRAY	RCD-S70
16	AH67-00179C	LENS-CONTROL REW	PMMA CLEAR	RCD-S70/75
	AH67-00179F	LENS-CONTROL REW	PMMA CLEAR	RCD-S75S/70S/70B
17	AH67-00179D	LENS-CONTROL STOP	PMMA CLEAR	RCD-S70/75
	AH67-00179G	LENS-CONTROL STOP	PMMA CLEAR	RCD-S75S/70S/70B
18	AH67-00179B	LENS-CONTROL FF	PMMA CLEAR	RCD-S70/75
	AH67-00179E	LENS-CONTROL FF	PMMA CLEAR	RCD-S75S/70S/70B
19	AH64-01927B	KNOB-FUNCTION	ABS, L/GRAY	RCD-S75
	AH64-01927C	KNOB-FUNCTION	ABS, D/GRAY	RCD-S70
	AH64-01927D	KNOB-FUNCTION	ABS, L/GRAY	RCD-S75S/70S
	AH64-01927E	KNOB-FUNCTION	ABS. BLACK	RCD-S70B
20	AH64-01928B	KNOB-TUNER	ABS, L/GRAY	RCD-S75
	AH64-01928C	KNOB-TUNER	ABS, D/GRAY	RCD-S70
	AH64-01928D	KNOB-TUNER	ABS, L/GRAY	RCD-S75S/70S
	AH64-01928E	KNOB-TUNER	ABS. BLACK	RCD-S70B
21	AH64-01929B	KNOB-DECK	ABS, L/GRAY	RCD-S75
	AH64-01929C	KNOB-DECK	ABS, D/GRAY	RCD-S70
	AH64-01929D	KNOB-DECK	ABS, L/GRAY	RCD-S75S/70S
	AH64-01929E	KNOB-DECK	ABS. BLACK	RCD-S70B
22	AH64-01926B	KNOB-VOLUME	ABS, L/GRAY	RCD-S75
	AH64-01926C	KNOB-VOLUME	ABS, D/GRAY	RCD-S70
	AH64-01926D	KNOB-VOLUME	ABS, L/GRAY	RCD-S75S
23	AH95-50001A	LATCH ASSY	MAX 555	
24	AH61-80030A	DAMPER ASSY	POM M0.8	
25	AH64-01917B	CABINET-TOP	ABS, L/GRAY	RCD-S75
	AH64-01917C	CABINET-TOP	ABS, D/GRAY	RCD-S70
	AH64-01917E	CABINET-TOP	ABS, L/GRAY	RCD-S75S
	AH64-01917F	CABINET-TOP	ABS, L/GRAY	RCD-S70S
	AH64-01917G	CABINET-TOP	ABS. BLACK	RCD-S70B
26	AH61-01091A	SPRING-DOOR L	PWR	
27	AH61-01092A	SPRING-DOOR R	PWR	
28	AH61-01076A	HOLDER-CASSETTE L	PC ABS, L/GRAY	RCD-S75
	AH61-01076B	HOLDER-CASSETTE L	PC ABS, D/GRAY	RCD-S70
	AH61-01076D	HOLDER-CASSETTE L	PC ABS, L/GRAY	RCD-S75S/S70S
	AH61-01076E	HOLDER-CASSETTE L	PC ABS, BLACK	RCD-S70B
29	AH61-01077A	HOLDER-CASSETTE R	PC ABS, L/GRAY	RCD-S75
	AH61-01077B	HOLDER-CASSETTE R	PC ABS, D/GRAY	RCD-S70
	AH61-01077D	HOLDER-CASSETTE R	PC ABS, L/GRAY	RCD-S75S/70S
	AH61-01077E	HOLDER-CASSETTE R	PC ABS, BLACK	RCD-S70B
30	AH64-01946B	DOOR-CASSETTE L	PC ABS, L/GRAY	RCD-S75
	AH64-01946C	DOOR-CASSETTE L	PC ABS, D/GRAY	RCD-S70
	AH64-01946D	DOOR-CASSETTE L	PC ABS, L/GRAY	RCD-S75S/70S
	AH64-01946E	DOOR-CASSETTE L	PC ABS, BLACK	RCD-S70B
31	AH64-01947B	DOOR-CASSETTE R	PC ABS, L/GRAY	RCD-S75
	AH64-01947C	DOOR-CASSETTE R	PC ABS, D/GRAY	RCD-S70
	AH64-01947D	DOOR-CASSETTE R	PC ABS, L/GRAY	RCD-S75S/70S
	AH64-01947E	DOOR-CASSETTE R	PC ABS, BLACK	RCD-S70B
32	AH64-01918B	WINDOW-CASSETTE L	PMMA SMOKE	RCD-S75
	AH64-01918C	WINDOW-CASSETTE L	PMMA SMOKE	RCD-S70
	AH64-01918D	WINDOW-CASSETTE L	PMMA SMOKE	RCD-S75S/70S
	AH64-01918E	WINDOW-CASSETTE L	PMMA SMOKE	RCD-S70B
33	AH64-01919B	WINDOW-CASSETTE R	PMMA SMOKE	RCD-S75
	AH64-01919C	WINDOW-CASSETTE R	PMMA SMOKE	RCD-S70
	AH64-01919D	WINDOW-CASSETTE R	PMMA SMOKE	RCD-S75S/70S
	AH64-01919E	WINDOW-CASSETTE R	PMMA SMOKE	RCD-S70B
34	AH61-01082A	BRACKET-DECK L	EGI T1.2	
35	AH61-01083A	BRACKET-DECK R	EGI T1.2	
36	AH61-01084A	BRACKET-DECK CENTER	EGI T1.2	
37	AH64-01085A	BRACKET-CD	EGI T1.2	
38	AH62-00068A	HEAT-SINK	AL T2.5	
39	AH61-01081A	HOLDER-PCB	ABS	
40	AH61-01086A	BRKT-ANTENNA	SPTE T0.5	
41	AH61-01090A	SPRING BATTERY SP	SUS304	
42	AH64-01916B	CABINET-BACK	HIPS, L/GRAY	RCD-S75
	AH64-01916C	CABINET-BACK	HIPS, D/GRAY	RCD-S70
	AH64-01916F	CABINET-BACK	HIPS, L/GRAY	RCD-S75S/S70S
	AH64-01916G	CABINET-BACK	HIPS, BLACK	RCD-S70B
43	AH63-00429B	COVER BATTERY	ABS, L/GRAY	RCD-S75
	AH63-00429C	COVER BATTERY	ABS, D/GRAY	RCD-S70
	AH63-00429D	COVER BATTERY	ABS, L/GRAY	RCD-S75S/70S
	AH63-00429E	COVER BATTERY	ABS, BLACK	RCD-S70B
44	AH64-01922B	HANDLE	ABS, L/GRAY	RCD-S75
	AH64-01922C	HANDLE	ABS, D/GRAY	RCD-S70
	AH64-01922D	HANDLE	ABS, L/GRAY	RCD-S75S/70S
	AH64-01922E	HANDLE	ABS, BLACK	RCD-S70B
45	AH61-01088A	SPRING BATTERY PM	SUS304	
46	AH61-01089A	SPRING BATTERY SM	SUS304	
47	AH61-01087A	SPRING BATTERY M	SUS304	

2-3 CD Deck Exploded View and Parts List

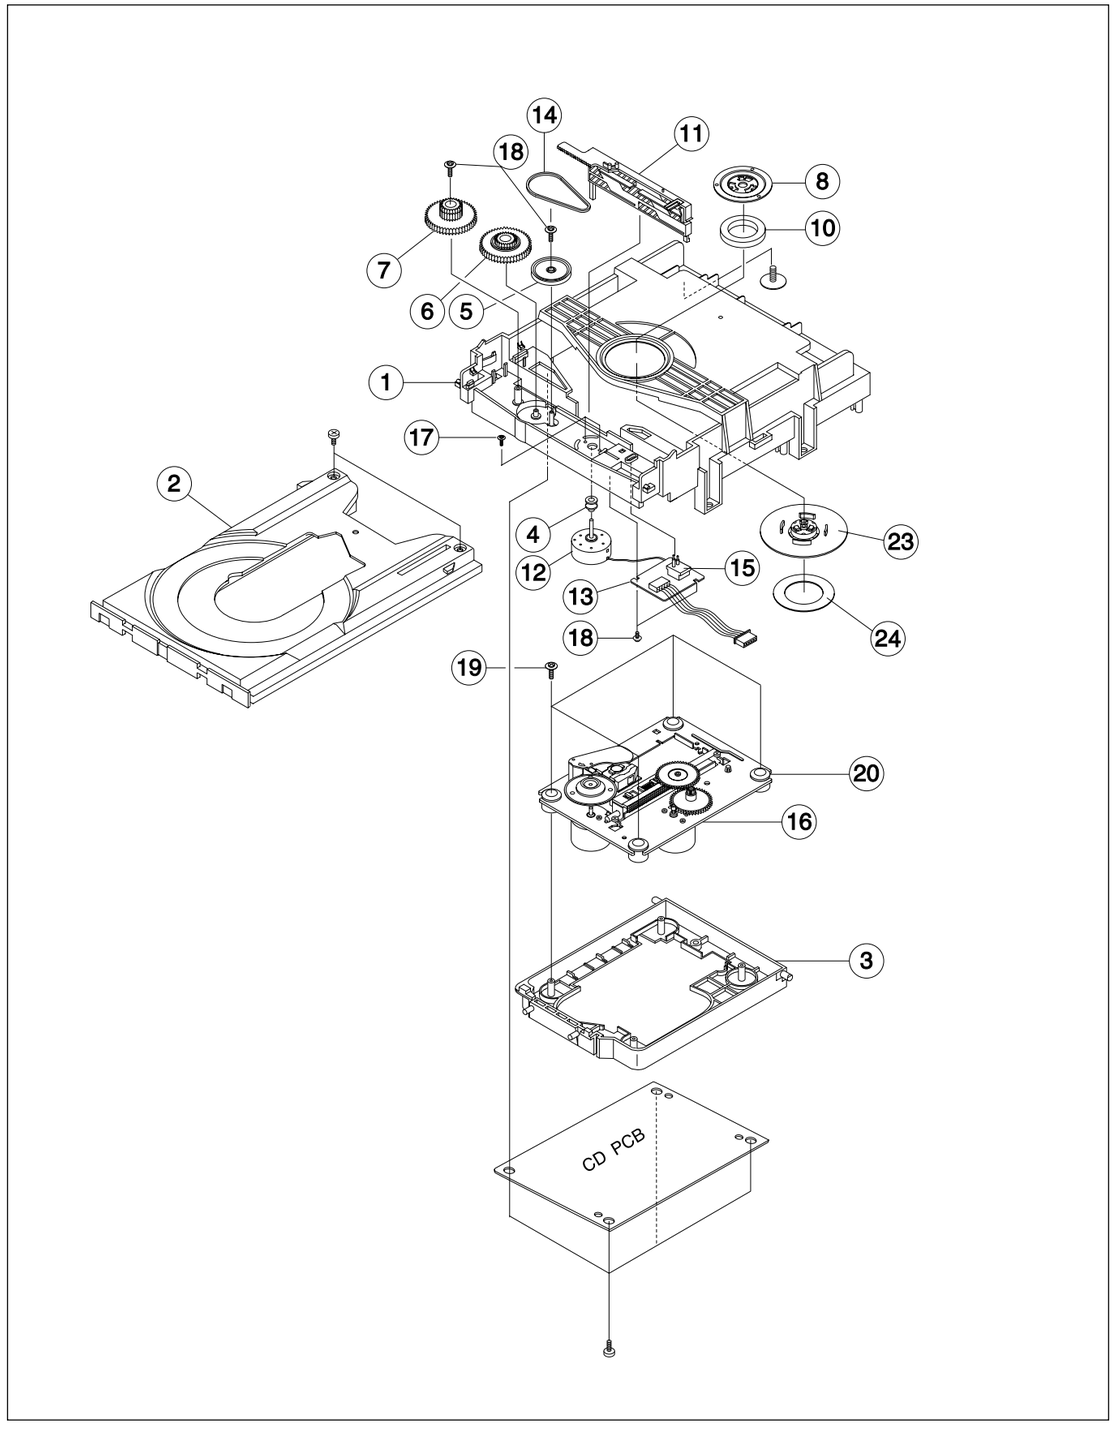

No.	Code No.	Description	Specification	Q'TY
	AH59-00138E	**CD MECHA**	**CMS-D100**	
1	AH61-00746A	BASE-MAIN	ABS BLK	1
2	AH63-00294A	TRAY-DISC	ABS D/GRAY	1
3	AH66-00159A	LEVER-LIFT	ABS BLK	1
4	AH66-00160A	PULLEY-MOTOR	POM WHT	1
5	AH66-00161A	GEAR-PULLEY	TPE WHT	1
6	AH66-00162A	GEAR-MIDDLE	TPE WHT	1
7	AH66-00163A	GEAR-TRAY	POM WHT	1
8	AH61-10241B	BRKT-CHUCK	SECC T0.8	1
10	3302-000159	MAGNET-CHUCK	FERRITE 6P	1
11	AH66-00166A	SLIDE-CAM	POM WHT	1
12	AH31-00030A	MOTOR-DC	RF-300CA-11440	1
13	AH41-00352A	PCB-PULLEY	26.5*21.6	1
14	AH66-00167A	BELT-PULLEY	CR 1.5	1
15	3409-001119	SWITCH-DETECTOR	JDS2200	1
16	AH59-01006A	CD DECK	CMS-P73SG6	1
17	6001-001257	SCREW-MACHINE	1.7*3(W4.5)	2
18	AJ60-10001A	SCREW-TAP	2*5(W7)	4
19	6003-001210	SCREW-TAP	2.6*6(W12)	5
20	AH73-00025B	RUBBER-CD	BUTYL 15	4
23	AH66-90053A	TABLE-CHUCK	ABS+GF10%	1
24	AH63-00068B	SHEET-CHUCK	HYMERON SHEET,0.45T	1